

Appendix E

This page intentionally left blank.

Appendix E Table of Contents

E.1	Monitoring Well and Aquifer Tube Installation	E-1
E.2	Borings	E-2
E.3	Maintenance.....	E-2
E.4	Decommissioning.....	E-2
E.5	Appendix E Figures.....	E-4
	Figure E.1 Categorization of Unique Well Identification Numbers.....	E-4
	Figure E.2 Hanford Site Wells and Aquifer Tubes Installed in 2013	E-5
E.6	Appendix E Tables	E-6
	Table E.1 Hanford Site Well Types	E-6
	Table E.2 Wells Installed in 2013	E-7
	Table E.3 Aquifer Tubes Installed in 2013	E-8
	Table E.4 Wells Decommissioned in 2013	E-9

This page intentionally left blank.

Appendix E

Well Installation, Maintenance, and Decommissioning

This chapter describes well installation, maintenance, and decommissioning activities on the Hanford Site in 2013. Numerous water wells were drilled or hand dug by early settlers for drinking water supplies, beginning in the early half of the 20th Century. Several thousand wells have been drilled since the early 1940s to support the Site's nuclear weapons production program. Since the 1990s, many additional wells have been drilled to support the Site's environmental cleanup mission.

All well types are tracked on the Hanford Site through the Well Information and Document Lookup (WIDL) database, which is available to users of the Hanford Local Area Network. Much of this information (borehole geophysical logging reports and data sheets) is also available to the public through the DOE Environmental Dashboard Application. Other data can be accessed via borehole summary reports (report numbers prefixed by SGW) that are generated for each drilling campaign.

Recognized well types onsite include aquifer tubes, borings, groundwater wells, hosted piezometers, independent piezometers, piezometer hosts, soil tubes, lysimeters, and vadose wells (Table E.1). All wells (cased and uncased), borings, aquifer tubes, soil tubes, piezometers, and other subsurface excavations are required to receive a unique Hanford well identification (ID) number. A total of 12,030 unique well ID numbers had been assigned on the Hanford Site by the end of 2013. The Washington State Department of Ecology (Ecology) also assigns a well ID number to each of these well types.

Figure E.1 presents the categorization of unique well ID numbers taken from WIDL and their approximate geographic designations. During 2013, 4,059 of these unique well ID numbers were documented to be in use, representing 2,960 wells, 122 piezometers within host wells, 79 lysimeters within host lysimeters, 511 aquifer tubes, and 387 soil tubes. Thus, of the 12,030 wells drilled, 7,971 wells are candidates for decommissioning or and have been decommissioned.

E.1 Monitoring Well and Aquifer Tube Installation

DOE works with the appropriate regulatory agencies to define the need for new wells at the Hanford Site. Each year, DOE proposes new wells to meet the requirements of RCRA detection and assessment groundwater monitoring requirements; characterization, remediation, and monitoring for CERCLA; and long-term monitoring of regional groundwater plumes in accordance with DOE orders based on AEA requirements. These efforts may include new or ongoing RCRA assessment of groundwater contamination, replacement of monitoring wells that go dry because of the declining regional water table, replacement of wells that need to be decommissioned, improvement of spatial coverage for different monitoring networks and plume monitoring, and characterization of subsurface contamination.

New RCRA, CERCLA, and AEA monitoring well proposals are reviewed, prioritized, and approved annually in accordance with the Tri-Party Agreement (Ecology et al., 1989, *Hanford Federal Facility Agreement and Consent Order*) Milestone M-024. All new wells are constructed as either resource protection wells or water supply wells in accordance with WAC 173-160. Well requirements are integrated, prioritized, and documented through the budget development process, discussions between DOE and the regulatory agencies, and specific monitoring and characterization requirements.

During 2013, sixteen (16) wells were installed (Table E.2) and eighteen (18) aquifer tubes were installed (Table E.3) at the Hanford Site. The approximate locations of the new wells are shown in Figure E.2. The 16 wells installed were completed (accepted) in 2013. In some cases, drilling began in 2012. Drilling of additional wells began in 2013 and was completed in 2014

Water well reports for all newly constructed wells, as required by WAC 173-160, were submitted to Ecology. Detailed well information such as geologic and geophysical descriptions, characterization activities (that is, sediment and groundwater sampling, aquifer testing), and construction records for the new wells are stored in WIDL and consolidated in borehole summary reports. Much of this information is also accessible and available through the DOE Environmental Dashboard Application.

E.2 Borings

During 2013, no borings were drilled.

E.3 Maintenance

During 2013, well maintenance was conducted 397 times on the different well types. Surface modifications included repair or replacement of locking well caps, surface casing repairs, diagnosis and repair of electrical wiring, labeling, electrical bonding, and modifications to surface pump and riser pipe discharge components and fittings. Subsurface tasks typically included repair and replacement of sampling pumps, downhole camera surveys, pump and equipment retrieval, and replacement of discharge tubing. Well rehabilitation activities included surging, swabbing, screen brushing, chemical treatment, and over-pumping to improve well performance.

Documentation for well maintenance activities is entered into the Well Maintenance Application database and accessible through WIDL. This information is also accessible externally through the DOE Environmental Dashboard Application.

E.4 Decommissioning

As part of DOE asset management, wells, boreholes, or other subsurface installations are identified for decommissioning when they are no longer useful for achieving the Hanford Site environmental cleanup mission. Well decommissioning is driven by DOE/RL-2005-70, *Hanford Site Well Decommissioning Plan*. Decommissioning is defined therein as the properly completed and documented sealing of water or resource protection wells in compliance with state groundwater protection laws (WAC 173-160). The plan lays out the basis, decision logic, and implementation process for prioritizing and decommissioning Hanford Site wells.

All candidate wells for decommissioning must be reviewed and approved by Hanford Site contractors, DOE, Ecology, EPA, and other potential well users such as the Pacific Northwest National Laboratory prior to decommissioning. The initial phase of decommissioning includes a thorough records review and physical inspection of each well to confirm the well's location and configuration (well attributes). Normally, a well becomes a candidate for decommissioning under one of the following conditions:

- The well is no longer used for water level or contaminant monitoring, contaminant extraction, in situ remedial treatment of contaminated groundwater, permitted injection of treated effluent from a remedial action, water supply, research, or technology demonstration.
- The well has no specified future purpose.
- The well is unusable, abandoned, or permanently discontinued.
- The well is in such disrepair that its continued use is impractical.
- The well is an environmental, safety, or public health hazard (for example, it does not meet WAC 173-160 requirements for well completion; however, there are special provisions for continued use of a non-WAC 173-160 compliant well).
- The well interferes with environmental remediation, excavation, and/or construction activities.

In 2013, eight wells (Table E.4) were physically decommissioned. Decommissioning is performed in accordance with WAC 173-160-460 (“What Is the Decommissioning Process for Resource Protection Wells?”), applicable well decommissioning variances, and conditions defined in the Hanford Facility RCRA Permit (WA78900008967).

Decommissioning typically involves backfilling a well with impermeable material in both the annular space and the casing to prevent vertical movement of water and/or contaminants into the vadose zone and groundwater. For wells that are constructed according to WAC 173-160 requirements (compliant), decommissioning is performed by filling the well screen and the casing with an impermeable material (e.g., bentonite or cement grout). For older, noncompliant wells, the casing is either removed and the borehole is filled with seal material, or the casing is perforated and pressure grouted to create an external annular seal and then internally grouted to the surface. As far as possible, all casing is removed from the ground. A brass survey marker identifying the former well is typically set in cement grout at the ground surface over the decommissioned location. Decommissioning activities result in the permanent removal of a well, borehole, or piezometer from service and from the Hanford Site active well inventory.

A completed water well report form is required to be transmitted by the contractor or in-house driller to Ecology when a well is decommissioned. The report provides the details on the well’s final construction and the steps taken to decommission the well.

No wells were administratively decommissioned in 2013. Administratively decommissioned wells may be wells that can no longer be located and are determined to no longer exist; more generally, they are wells that were physically decommissioned but still require documentation describing this in the well database.

Each year a very limited number of previously unknown wells are usually discovered during the conduct of field activities. Once discovered, these wells are assigned a unique well ID number, assigned an appropriate well status, and added to WIDL. There were no well discoveries in 2013.

E.5 Appendix E Figures

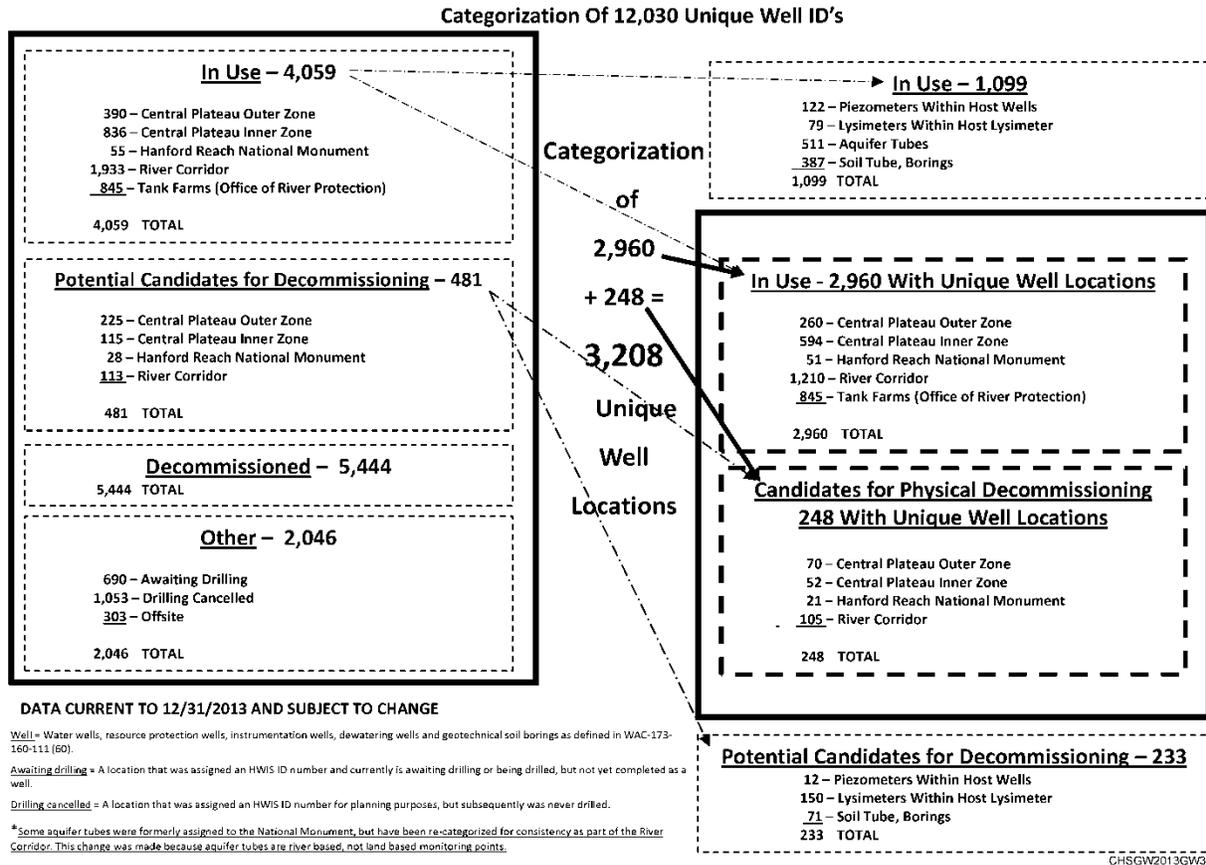


Figure E.1 Categorization of Unique Well Identification Numbers

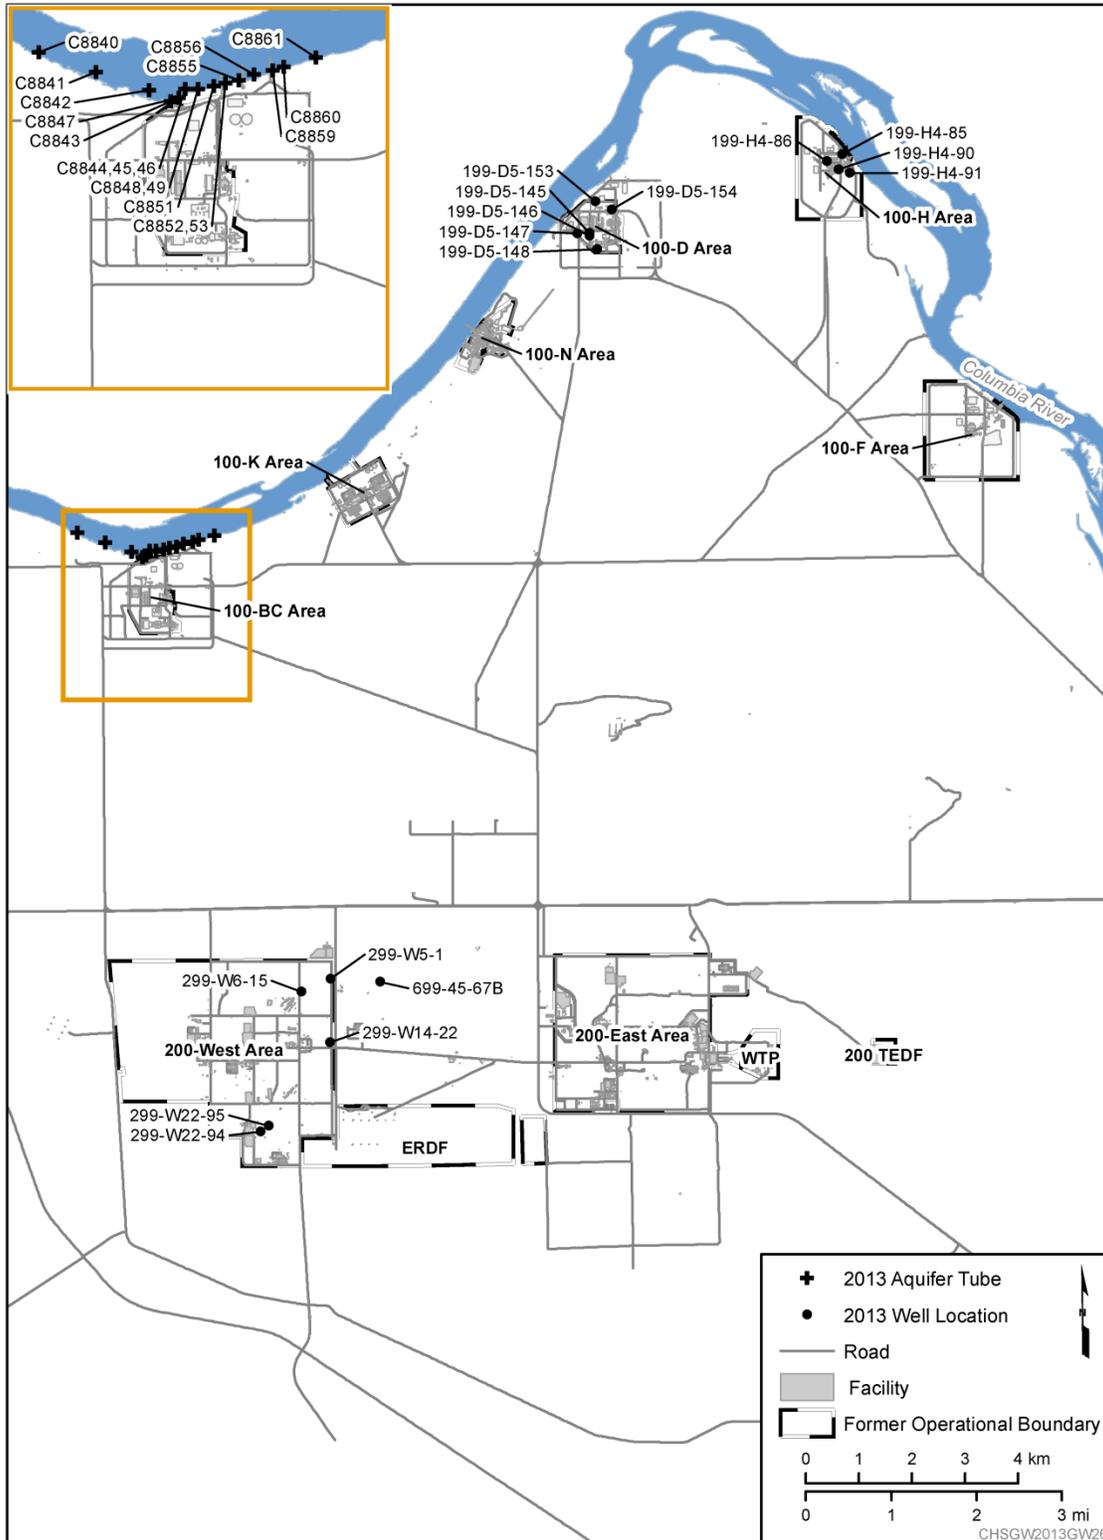


Figure E.2 Hanford Site Wells and Aquifer Tubes Installed in 2013

E.6 Appendix E Tables

Table E.1 Hanford Site Well Types

Well Category	Description
Aquifer Tube	A groundwater monitoring site installed along the river shoreline. Generally consists of a small diameter tube (less than one inch) and screen installed using push technology near the water table.
Boring	A borehole or direct push that was decommissioned immediately after drilling. Decommissioning generally would have been performed before the drill rig was removed from the site.
Groundwater Well	A well constructed with the open interval extending below the water table. This is the general case and should not be used if the site could be otherwise classified as an aquifer tube, piezometer, or piezometer host.
Hosted Piezometer	Groundwater monitoring well constructed inside of a host well. In most cases, hosted piezometers are one and one-half inch in diameter with the open interval extending below the water table.
Independent Piezometer	Small diameter, independent, groundwater monitoring well not constructed inside of a host well. In most cases, the independent piezometers are one and one-half inch in diameter.
Lysimeter	Generally an in situ open bottom cylindrical core where the top is coincident with the ground surface, and with walls that prevent horizontal movement of moisture. A lysimeter is used to measure moisture or contaminant changes through time over a specific depth interval.
Piezometer Host	A well with one or more piezometers constructed inside it.
Soil Tube	Vadose zone monitoring site. A small diameter tube (less than two inches in diameter) and possibly a screen are left in place after the drilling is completed for sampling.
Vadose Well	A vadose zone monitoring site where casing (greater than two inches in diameter) is left in place after drilling activities are completed. May have a screen, open bottom, or may be closed.

Table E.2 Wells Installed in 2013

Operable Unit or Location	Well Name	Well ID	Well Purpose	Construction Depth (ft bgs)	Drilled Depth (ft bgs)	Acceptance Date
100-HR-3-D	199-D5-145	C8725	Monitoring	118.29	118.9	2/21/2013
100-HR-3-D	199-D5-146	C8726	100-HR-3 – Extraction (DX)	116.48	116.7	2/21/2013
100-HR-3-D	199-D5-147	C8727	Monitoring	108.05	108.3	2/21/2013
100-HR-3-D	199-D5-148	C8728	100-HR-3 – Injection (DX)	111.94	115.3	2/21/2013
100-HR-3-D	199-D5-153	C8789	100-HR-3 – Extraction (DX)	107.5	109.0	11/25/2013
100-HR-3-D	199-D5-154	C8790	100-HR-3 – Extraction (DX)	110.00	114.7	11/25/2013
100-HR-3-H	199-H4-85	C8723	Monitoring	52.40	53.5	4/9/2013
100-HR-3-H	199-H4-86	C8724	Monitoring	65.07	66.1	4/23/2013
100-HR-3-H	199-H4-90	C8787	Monitoring	93.31	97.4	11/25/2013
100-HR-3-H	199-H4-91	C8788	Monitoring	88.2	94.5	11/25/2013
100-HR-3 Total = 10						
200-UP-1	299-W22-94	C8203	Monitoring	283.52	342.8	11/5/2013
200-UP-1	299-W22-95	C8240	Monitoring	300.02	317.8	11/5/2013
200-UP-1 Total = 2						
200-ZP-1	299-W14-22	C7030	200 West Pump-and-Treat Expansion- Extraction	518.90	527.3	8/6/2013
200-ZP-1	699-45-67B	C8717	200 West Pump-and-Treat Expansion- Injection	450.05	450.8	8/6/2013
200-ZP-1	299-W6-15	C8720	200 West Pump-and-Treat Expansion- Extraction	480.00	482.0	8/6/2013
200-ZP-1	299-W5-1	C8721	200 West Pump-and-Treat Expansion- Extraction	465.00	469.0	8/6/2013
200-ZP-1 Total = 4						
Grand Total = 16						

bgs = below ground surface

ID = identification

Table E.3 Aquifer Tubes Installed in 2013

Operable Unit or Location	Well Name	Well ID	Well Purpose	Construction Depth (ft bgs)	Drilled Depth (ft bgs)	Acceptance Date
100-BC-5	C8840	C8840	Remedial Investigation	1.64	1.64	10/13/2013
100-BC-5	C8841	C8841	Remedial Investigation	1.64	1.64	10/13/2013
100-BC-5	C8842	C8842	Remedial Investigation	1.64	1.64	10/13/2013
100-BC-5	C8843	C8843	Remedial Investigation	1.64	1.64	10/13/2013
100-BC-5	C8844	C8844	Remedial Investigation	1.64	1.64	10/13/2013
100-BC-5	C8845	C8845	Remedial Investigation	3.28	3.28	10/13/2013
100-BC-5	C8846	C8846	Remedial Investigation	6.56	6.56	10/13/2013
100-BC-5	C8847	C8847	Remedial Investigation	1.64	1.64	10/13/2013
100-BC-5	C8848	C8848	Remedial Investigation	1.64	1.64	10/13/2013
100-BC-5	C8849	C8849	Remedial Investigation	3.28	3.28	10/13/2013
100-BC-5	C8851	C8851	Remedial Investigation	1.64	1.64	10/13/2013
100-BC-5	C8852	C8852	Remedial Investigation	1.64	1.64	10/13/2013
100-BC-5	C8853	C8853	Remedial Investigation	3.28	3.28	10/13/2013
100-BC-5	C8855	C8855	Remedial Investigation	1.64	1.64	10/13/2013
100-BC-5	C8856	C8856	Remedial Investigation	1.64	1.64	10/13/2013
100-BC-5	C8859	C8859	Remedial Investigation	1.64	1.64	10/13/2013
100-BC-5	C8860	C8860	Remedial Investigation	1.64	1.64	10/13/2013
100-BC-5	C8861	C8861	Remedial Investigation	1.64	1.64	10/13/2013
100-BC-5 Total = 18						
Grand Total = 18						

bgs = below ground surface

ID = identification

Table E.4 Wells Decommissioned in 2013

Operable Unit or Location	Well Name	Well ID	Out of Service Date
100-HR-3-D	199-D5-93	C4672	7/1/2013
100-HR-3-H	199-H4-14	A4620	5/14/2013
100-HR-3-H	199-H4-3	A4629	4/10/2013
100-HR-3-H	199-H4-48	A4634	5/14/2013
100-HR-3-H	199-H4-7	A4638	5/14/2013
100-HR-3-H	199-H4-9	A4640	5/14/2013
100-HR-3 Total = 6			
200-BP-5	299-E33-18	A4844	6/26/2013
200-BP-5 Total = 1			
200-PO-1	299-E25-236	C6542	6/26/2013
200-PO-1 Total = 1			
Grand Total = 8			

This page intentionally left blank.